 


HE AV Extendible inserts

500V 16A 6+ 




Inserts

Hoods/Housings: size **6B** bulkhead mounted housings.
For the HEAV extendible inserts assembly instructions pls see the 09-13 page

Male, Screw terminal




Size	Description	Designation	Order No.
6B	left hand version	HE-006-M.AV.L	122 006 011 0101
6B	right hand version	HE-006-M.AV.R	122 006 011 0102

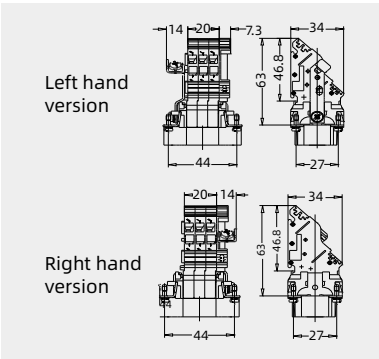 

Female, Screw terminal




Size	Description	Designation	Order No.
6B	left hand version	HE-006-F.AV.L	122 006 021 0101
6B	right hand version	HE-006-F.AV.R	122 006 021 0102

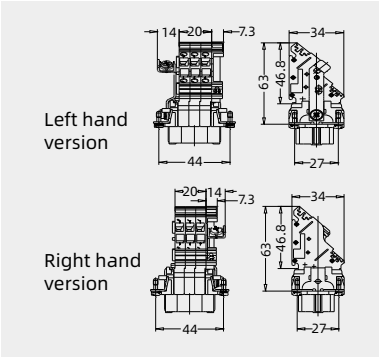 

Male, Quick-in



Size	Description	Designation	Order No.
6B	left hand version	HE-006-M Q .AV.L	122 006 001 0001
6B	right hand version	HE-006-M Q .AV.R	122 006 001 0002

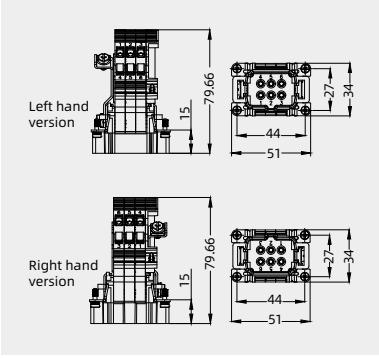 

Female, Quick-in



Size	Description	Designation	Order No.
6B	left hand version	HE-006-F Q .AV.L	122 006 002 0001
6B	right hand version	HE-006-F Q .AV.R	122 006 002 0002

