 


HE AV Extendible inserts

500V 16A 6+ 




Inserts

Hoods/Housings: size 6B bulkhead mounted housings.  
For the HEAV extendible inserts assembly instructions pls see the 09-13 page

Male, Screw terminal




| Size | Description        | Designation   | Order No.        |
|------|--------------------|---------------|------------------|
| 6B   | left hand version  | HE-006-M.AV.L | 122 006 011 0101 |
| 6B   | right hand version | HE-006-M.AV.R | 122 006 011 0102 |

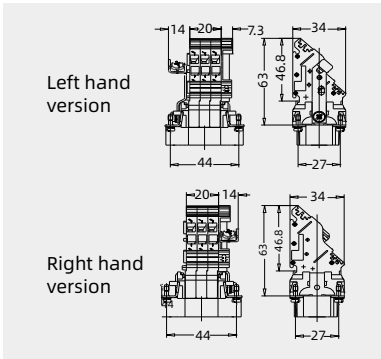 

Female, Screw terminal




| Size | Description        | Designation   | Order No.        |
|------|--------------------|---------------|------------------|
| 6B   | left hand version  | HE-006-F.AV.L | 122 006 021 0101 |
| 6B   | right hand version | HE-006-F.AV.R | 122 006 021 0102 |

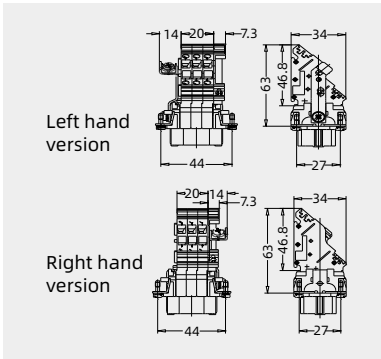 

Male, Quick-in



| Size | Description        | Designation    | Order No.        |
|------|--------------------|----------------|------------------|
| 6B   | left hand version  | HE-006-MQ.AV.L | 122 006 001 0001 |
| 6B   | right hand version | HE-006-MQ.AV.R | 122 006 001 0002 |

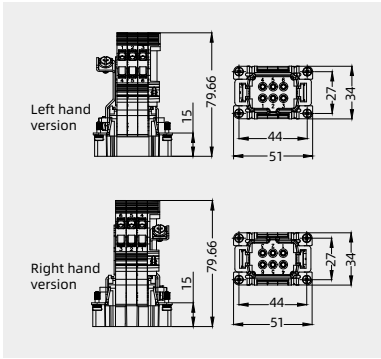 

Female, Quick-in



| Size | Description        | Designation    | Order No.        |
|------|--------------------|----------------|------------------|
| 6B   | left hand version  | HE-006-FQ.AV.L | 122 006 002 0001 |
| 6B   | right hand version | HE-006-FQ.AV.R | 122 006 002 0002 |

