 


HE AV Extendible inserts

500V 16A 10+ 

Inserts


Hoods/Housings: size **10B** bulkhead mounted housings.
For the HEAV extendible inserts assembly instructions pls see the 09-13 page

Male, Screw terminal




Size	Description	Designation	Order No.
10B	left hand version	HE-010-M.AV.L	122 010 011 0101
10B	right hand version	HE-010-M.AV.R	122 010 011 0102

 Left hand version

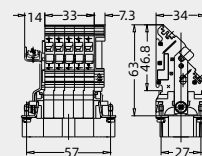

Right hand version

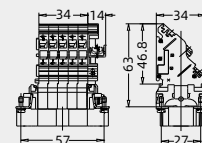 


Female, Screw terminal




Size	Description	Designation	Order No.
10B	left hand version	HE-010-F.AV.L	122 010 021 0101
10B	right hand version	HE-010-F.AV.R	122 010 021 0102

 Left hand version

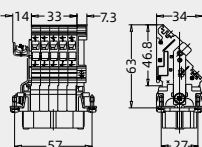

Right hand version

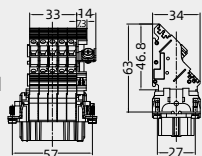 


Male, Quick-in




Size	Description	Designation	Order No.
10B	left hand version	HE-010-M _Q .AV.L	122 010 001 0001
10B	right hand version	HE-010-M _Q .AV.R	122 010 001 0002

 Left hand version

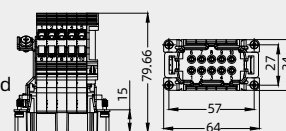

Right hand version

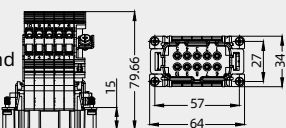 


Female, Quick-in



Size	Description	Designation	Order No.
10B	left hand version	HE-010-F _Q .AV.L	122 010 002 0001
10B	right hand version	HE-010-F _Q .AV.R	122 010 002 0002

 Left hand version

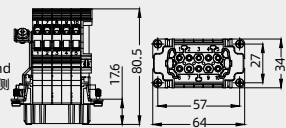

Right hand version

