 


HE AV Extendible inserts

500V 16A 16+ 



Inserts


Hoods/Housings: size **16B** bulkhead mounted housings.
For the HEAV extendible inserts assembly instructions pls see the 09-13 page

Male, Screw terminal




Size	Description	Designation	Order No.
16B	left hand version	HE-016-M.AV.L	122 016 011 0101
16B	right hand version	HE-016-M.AV.R	122 016 011 0102

 Left hand version

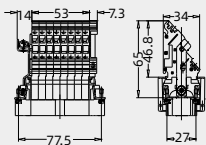

Right hand version

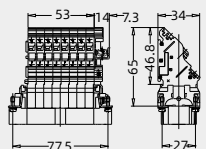 


Female, Screw terminal




Size	Description	Designation	Order No.
16B	left hand version	HE-016-F.AV.L	122 016 021 0101
16B	right hand version	HE-016-F.AV.R	122 016 021 0102

 Left hand version

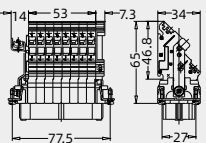

Right hand version

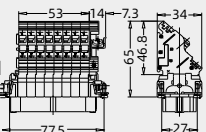 


Male, Quick-in




Size	Description	Designation	Order No.
16B	left hand version	HE-016-M Q .AV.L	122 016 001 0001
16B	right hand version	HE-016-M Q .AV.R	122 016 001 0002

 Left hand version



Right hand version

 


HE AV

Female, Quick-in



Size	Description	Designation	Order No.
16B	left hand version	HE-016-F Q .AV.L	122 016 002 0001
16B	right hand version	HE-016-F Q .AV.R	122 016 002 0002

 Left hand version



Right hand version

